

VVS - Ideal Cabinet Modifications

The Opening

- 1) Round the inside and outside edge of the cabinet opening



- 2) Bevel the bottom style to allow more room to the opening



- 3) Create an opening with a 5+'' height (the greater the height, the easier it is to access and return tools)



The Panel



- 1) Make sure the inside surface of the panel is flat

- If panel has an inlay depression, cut 3/4'' wood to fill gap and stain




- 2) Place knobs in a diagonal fashion, with Velcro male section between:

- 24'' wide opening required to wrap 4 cords

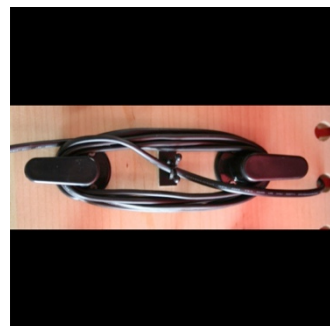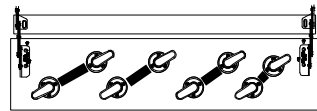

2) Place knobs...continued


- 1" wide opening required to wrap 3 cords

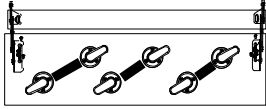

If panel height is less than 5" consider the following configuration:



- 18" wide opening required to wrap 2 cords

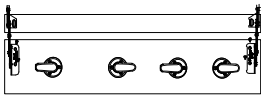

The Appliance Panel

1) Securing the Caps

- Place tube inside panel.



- Apply super glue to cap



- Twist cap onto tube for a secure fit



- Let glue dry

